


BOARD PLUG


Mounting in drywall

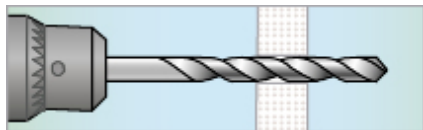


1. Drill a hole \varnothing 10 mm.



2. Push together the board plug.

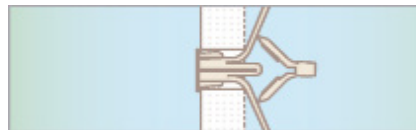

3. Push the plug into the wall.

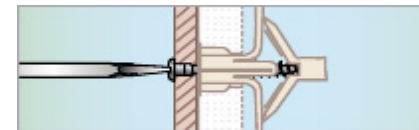

4. Mount the object. Tighten the screw so it is flush against the surface. Now tighten the screw one additional turn, no more.